

WHATSMINER M50

Air Cooling



Components

Power Supply, Fan, Control Board, Hash Board, Case

Flashing Light Introduction

Blinking Green Light:
Working normally

Green and Red Lights Alternately Flashing:
Alarm status and need to find the response error code

Safety Guidelines

1. Please check if there is any obvious physical failure before power on, beware of electric shock
2. The product must be kept away from water sources and must not be operated in a humid environment
3. It requires professionals to carry out daily maintenance on the product
4. It is forbidden to directly touch the product by hand when power is on
5. Please use the stable voltage

Warranty Period

One year after leaving the factory

After-sales Contact Information

1. Email: Support@microbt.com
2. Telegram Group: [@WhatsMiner Community](#)

SPECIFICATION

| | | | |
|---------------------|---------------------------|----------------------|-------------------|
| Hashrate | 112T ± 5% | Size | 430mm*155mm*226mm |
| Power Ratio | 29J/T ± 5%@25° C | Weight | 11.7KG |
| Power On Wall | 3248W ± 10% | Internet Connections | Ethernet |
| Working Temperature | -5° C ~ 35° C | Power Cable Model | IEC C19, ≥16A |
| PSU Model | P221B/P222B AC220V ~ 240V | | |